

Voice Password Lock 'N Safe

60-1227

OWNER'S MANUAL — Please read before using this equipment.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

- ⚠ — Warning ! — Important
⚡ — Caution 💡 — Hint
📝 — Note

⚠ WARNING ⚠

Dispose of old batteries promptly and properly. Do not burn or bury them.

⚡ CAUTION ⚡

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the safe for several weeks, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

Thank you for purchasing the RadioShack Voice Password Lock 'N Safe. It stores your favorite things, such as baseball cards or play jewelry. The coin slot at the top lets you use it as a piggy bank. The safe can be opened by a secret code or a password. When you enter a code or say your password to open it, **OPEN** flashes and the door creaks. The Lock 'N Safe is recommended for ages 6 and up.

READY Indicator — Lights yellow while a code or password is being entered. Flashes yellow when prompting for a password to be recorded or entered.

FAIL Indicator — Flashes red if an incorrect code or password is entered, or if your password is not accepted while recording it. Also flashes red if you press **CLEAR** to reset your password.


OPEN Indicator — Lights green when the door is unlocked and open. Flashes green after a code is entered, when prompting to enter a new code, when **CLEAR** is pressed to reset password, and when password is accepted.

RECORD — Hold down to record your password.

Microphone

Rotate clockwise to open the safe.

Coin Slot

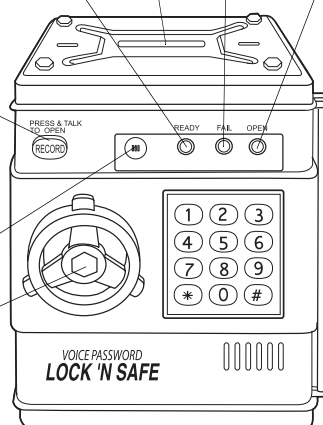

INSTALLING BATTERIES

Your safe requires three AA batteries (not included). For the best performance and longest life, we recommend RadioShack alkaline batteries. ⚠ ⚡



RadioShack®

www.radioshack.comSM

© 2002 RadioShack Corporation.

All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

NOTE

Installing Batteries

Removing the batteries clears your password. You must input your password again.


Opening the Safe with a Code

- If you do not open the door within five seconds, **OPEN** turns off and the safe is locked again.
- If the door is kept open for more than 10 seconds, **FAIL** flashes and the safe beeps twice. Close the door to stop the beeping.
- If the wrong code is entered, **FAIL** flashes and the safe tells you your password is incorrect. Try entering your code again.

Changing the Code

- If you do not enter a new code within about 10 seconds, **FAIL** and **OPEN** stop flashing. Start over from Step 2.

1. Use a Phillips screwdriver to loosen the screw from the battery compartment cover. Remove the cover.
2. Insert the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside. ✓

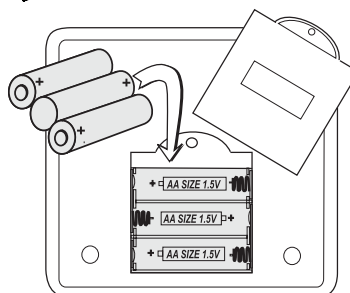

3. Replace the cover and tighten the screw. When the safe stops operating properly, replace the batteries.

OPENING THE SAFE WITH A CODE

You can enter a four-digit code to open the safe. The preset code is 0000.


1. Press **0000**. **READY** lights while you enter the code and **OPEN** flashes for about five seconds. The safe confirms your password and **OPEN** lights.
2. Rotate the knob clockwise and pull open the door. ✓

CHANGING THE CODE

You can change the code to another number that you can more easily remember.


1. Enter the currently set code and open the door.
2. Press *. **FAIL** and **OPEN** flash and the safe asks you to set the code.
3. Enter the new four-digit code. ✓
4. Press # to store the new code. **FAIL** and **OPEN** stop flashing.
5. Close the door.

RECORDING YOUR PASSWORD

You can record a voice password to use to open the safe. 

1. Hold down **RECORD**. **READY** flashes and you are prompted to record your password. The safe beeps two times and **READY** turns off.
2. When **READY** lights again, move as close as possible to the microphone and say your password within about two seconds.
3. After a few seconds, **OPEN** turns on and the safe tells you your password is accepted.

OPENING THE SAFE WITH A PASSWORD

1. Hold down **RECORD**. **READY** flashes. The safe prompts you for your password, then beeps two times. **READY** turns off.
2. When **READY** turns on again, say your password into the microphone.
3. If your password is correct, **OPEN** flashes, and the safe tells you your password has been accepted. Release **RECORD**. 
4. When **OPEN** lights, rotate the knob clockwise and pull open the door. When **OPEN** turns off, the safe is locked again.
5. If you forget your password, open the door using the four-digit code, press **CLEAR** (behind the safe's door) to clear the password, and record it again.

CHANGING YOUR PASSWORD

1. To change your password at any time, open the safe and press **CLEAR** to clear your password. **FAIL** and **OPEN** flash and the safe beeps twice. The safe tells you to record your password again.
2. Close the door. To record your password again, repeat Steps 1-3 in "Recording Your Password".

NOTE

Recording Your Password

- Find a quiet place to record your password to ensure that the safe correctly records it.
- Do not release **RECORD** until the safe responds to your password.
- If the safe asks you to say your password again and **FAIL** flashes, repeat Steps 1-3 to record your password.

Opening the Safe with a Password

- If your password is incorrect, **FAIL** flashes and tells you your password has not been accepted. The door remains locked.

Your password might not be accepted even though it is correct because:

- You said the password faster or slower than the recorded password. Say the password again at the correct speed.
- You started recording too early or too late relative to when **READY** turns on. Say your password again just after the indicator turns on.
- Your voice is unclear or too soft. Move closer to the microphone and speak louder.
- Your environment is too noisy. Try again in a quiet environment.

NOTE

Care

Keep the safe dry; if it gets wet, wipe it dry immediately. Use and store the safe only in normal temperature environments. Handle the safe carefully; do not drop it. Keep the safe away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Service and Repair

If your safe is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the safe's internal components can cause a malfunction and might invalidate its warranty.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance; alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

VOICE MESSAGES

Action	Message
When recording your password:	Record your password.
If your password has been accepted during recording:	Accepted.
If your password has not been accepted during recording:	Oh! I can't hear, once again.
To open the safe:	Password please.
When your code or password is correct:	Hurray! You get it.
When your code or password is incorrect:	<ul style="list-style-type: none">• Oops! Password is not correct, once again.• Your password is not correct! Try again.• Oh, I can't hear, once again. Oh, I can't hear, try again.
After three incorrect attempts:	Access denied, who are you?
After entering a correct code or password, the safe tells you how many intruders have attempted access:	One (up to five) intruder(s). Welcome back!
If the failed passwords are entered more than five times, when you successfully open the safe:	Intruder access. Welcome back!
If no failed password has been entered:	Welcome back!
When you press CLEAR:	Record your password once again.

RESETTING THE SAFE

If the safe does not operate or accept your password during recording, remove the batteries. Press **RECORD** once, then replace the batteries. Your password is cleared and the code is reset to 0000.